


**Monterings anvisning för  
Avantgarde 3 -CS, -CV, Avantgarde 4 DV  
TBB1004**

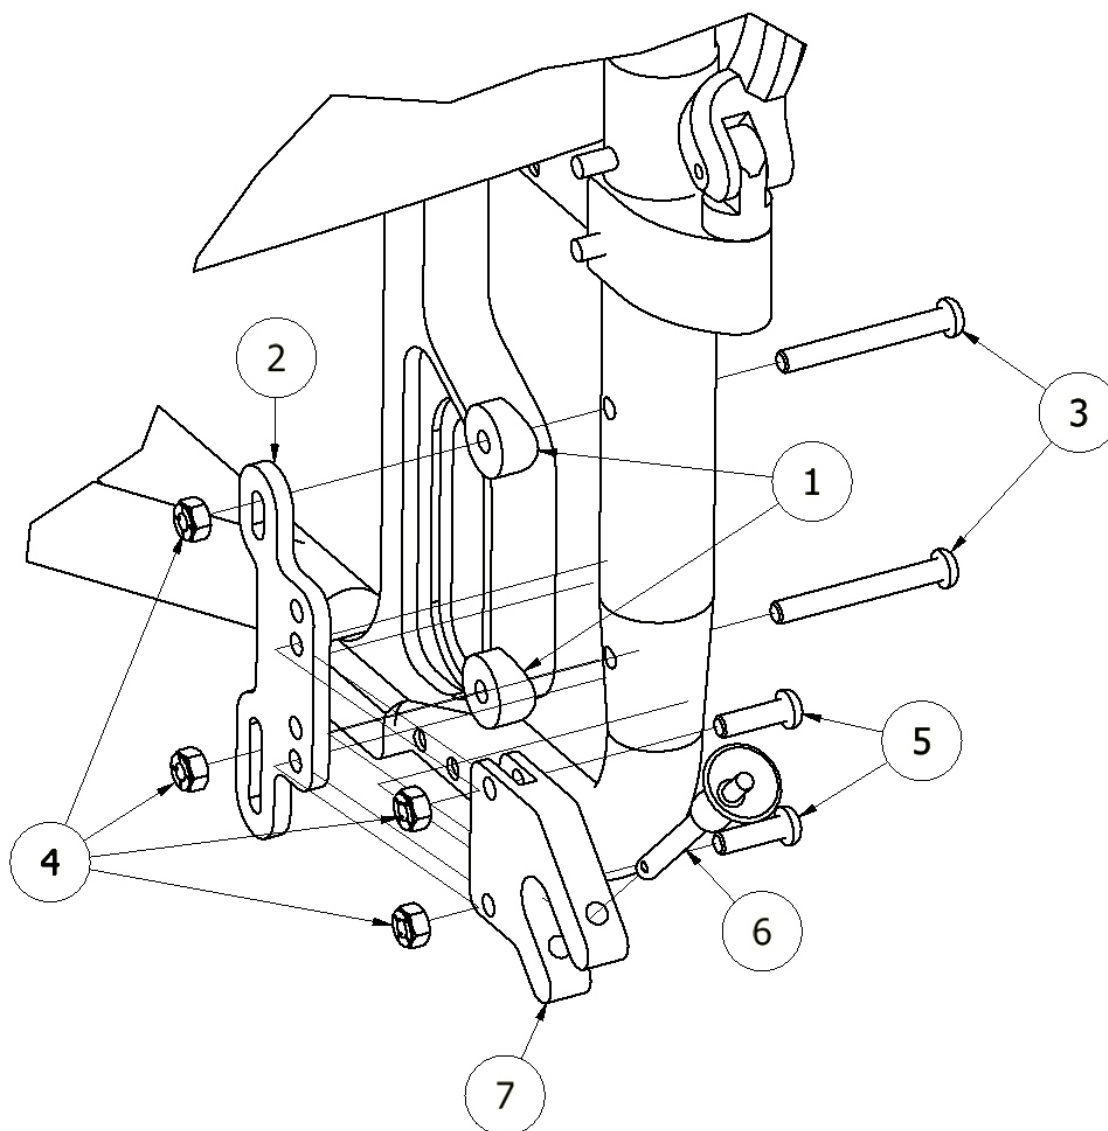

| Placering | Detalj Nummer | Antal | Beskrivning              |
|-----------|---------------|-------|--------------------------|
| 1         | 100 400 102   | 2     | Distans                  |
| 2         | TB2043        | 1     | Fix Platta B             |
| 3         | XSM6X50       | 2     | Skruv Cylindrisk M6 x 50 |
| 4         | XSM6ML        | 4     | Låsmutter M6             |
| 5         | XSM6X20       | 2     | Skruv Rundad M6 x 20     |
| 6         | TB2016        | 1     | QR-Pinne                 |
| 7         | TB2003 Rev3   | 1     | Chassi Fäste             |